

Adaptor sockets - Manchons - Manguitos unión - Uniões


UP. 05. SF

- Socket
- Female solvent socket
- Metric series

- Manchon
- Femelle à coller
- Série métrique

- Manguito unión
- Encolar hembra
- Série métrica

- União
- Colar fêmea
- Série métrica

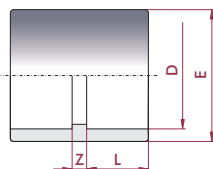

D	CODE	REF.	DN	PN	L	Z	E
16	16309	05 05 016	10	16	14	3	22
20	01872	05 05 020 ^{1 2}	15	16	16	3	27
25	01873	05 05 025 ^{1 2}	20	16	19	3	33
32	01874	05 05 032 ^{1 2}	25	16	22	3	41
40	01875	05 05 040 ^{1 2}	32	16	26	3	50
50	01876	05 05 050 ^{1 2}	40	16	31	3	61
63	01877	05 05 063 ^{1 2}	50	16	38	3	75
75	01878	05 05 075 ^{1 2}	65	16	44	4	90
90	01879	05 05 090 ^{1 2}	80	16	51	5	108
110	01880	05 05 110 ¹	100	16	61	6	131
125	01881	05 05 125 ¹	110	16	69	7	148
140	01882	05 05 140 ¹	125	16	76	9	164
160	01883	05 05 160 ¹	150	10	86	9	180
200	01884	05 05 200	175	10	106	10	225
225	01885	05 05 225	200	10	119	10	252
250	01886	05 05 250	225	10	131	12	280
315	01887	05 05 315	300	10	164	12	352
400	05329	05 05 400 *	375	6	206	12	432


UP. 05. SFT

- Adaptor Socket
- Female solvent socket & BSP female thread
- Metric series

- Manchon
- Femelle à coller et femelle à visser BSP
- Série métrique

- Manguito unión mixto
- Encolar hembra y roscar hembra BSP
- Série métrica

- União transição
- Colar fêmea e roscar fêmea BSP
- Série métrica

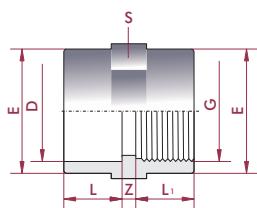

D x G	CODE	REF.	DN	PN	L	L ₁	Z	E	S
16 x 3/8"	01888	05 05 416	12	10	14	14	3	22	22
20 x 1/2"	01889	05 05 420	15	10	16	16	3	28	27
25 x 3/4"	01890	05 05 425	20	10	19	19	3	34	33
32 x 1"	01891	05 05 432	25	10	22	22	3	43	41
40 x 1 1/4"	01892	05 05 440	32	10	26	26	3	54	50
50 x 1 1/2"	01893	05 05 450	40	10	31	31	3	63	61
63 x 2"	01894	05 05 463	50	10	38	38	3	78	75
75 x 2 1/2"	01895	05 05 475	65	10	44	44	4	90	90
90 x 3"	01896	05 05 490	80	10	51	51	6	108	108
110 x 4"	01897	05 05 510	90	10	61	61	6	135	135


UP. 05. SFTR

- Adaptor socket reinforced
- Female solvent socket & BSP female thread
- Metric series

- Manchon renforcé
- Femelle à coller et femelle à visser BSP
- Série métrique

- Manguito unión mixto reforzado
- Encolar hembra y roscar hembra BSP
- Série métrica

- União transição reforçada
- Colar fêmea e roscar fêmea BSP
- Série métrica

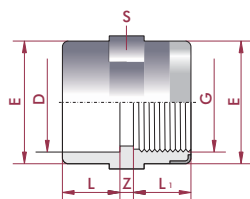

D x G	CODE	REF.	DN	PN	L	L ₁	Z	E	S
20 x 1/2"	01908	05 05 820	15	16	16	16	3	28	27
25 x 3/4"	01909	05 05 825	20	16	19	19	3	34	33
32 x 1"	01910	05 05 832	25	16	22	22	3	43	41
40 x 1 1/4"	01911	05 05 840	32	16	26	26	3	54	50
50 x 1 1/2"	01912	05 05 850	40	16	31	31	3	63	61
63 x 2"	01913	05 05 863	50	16	38	38	3	78	75


UP. 05. FT

- Threaded adaptor socket
- BSP female thread

- Manchon à visser
- Femelle à visser BSP

- Manguito unión doble rosca
- Roscar hembra BSP

- União rosçada
- Roscar fêmea BSP

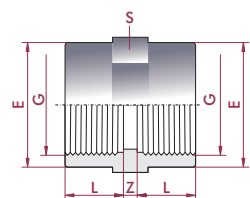

G	CODE	REF.	DN	PN	L	Z	E	S
3/8"	01898	05 05 616	10	10	14	3	22	22
1/2"	01899	05 05 620	15	10	16	3	27	28
3/4"	01900	05 05 625	20	10	19	3	33	34
1"	01901	05 05 632	25	10	22	3	41	43
1 1/4"	01902	05 05 640	32	10	26	3	50	54
1 1/2"	01903	05 05 650	40	10	31	3	61	63
2"	01904	05 05 663	50	10	38	3	75	78
2 1/2"	01905	05 05 675	65	10	44	4	90	90
3"	01906	05 05 690	80	10	51	6	108	108
4"	01907	05 05 710	100	10	61	6	135	135